

Performing an Initial Ink Charge

Important: Please read through these instructions before attempting to install your new DX100.


Place the new printer in place and open the ink bay doors.



Insert the Ink Cartridges

Remove the Maintenance Cartridge from the printer, then re-insert. This ensures the cartridge is properly installed in the event it has become dislodged during shipping.

Do not load paper at this time.

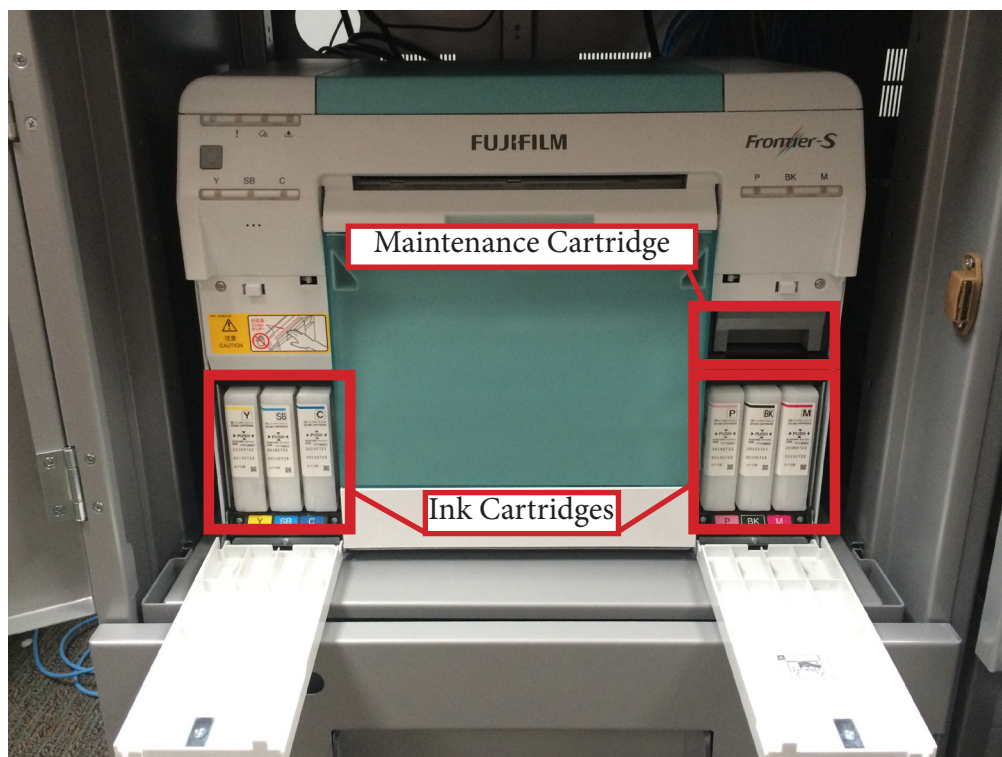

Be sure the printer power button is off by making sure it is not pushed in.

Plug in the power cable on the right hand side of the printer.

Do not plug in the USB cable at this time.

Press the power button on the printer to allow the printer to charge the ink system.

This process will take 15 minutes.

Important:
Do not open any covers or interrupt this process.



When the new printer is completely charged with ink you will see a solid blue light and a solid amber light above the paper.

Power off the printer.

Plug in the USB cable on the right side of the printer.

Please proceed to load the system application. You will be instructed when to power on the printer.

